

SpeedClean®

Innovative Maintenance Tools.



**Mini-Split
Bib® Kit
& Mini-Split
Bib® XL**



SPEEDCLEAN®

OPERATING & MAINTENANCE INSTRUCTIONS

U.S. Patents: 6,863,116, 9,259,769

Thank you for purchasing this SpeedClean Mini-Split Bib® Kit & Mini-Split Bib® XL. We appreciate your business and look forward to serving you in the future. As with all SpeedClean products, you can be assured that the finest quality components and workmanship have gone into this unit.

Please take a few minutes to read the following Operating and Maintenance Instructions. Please pay particular attention to the safety instructions and exercise caution when using this product.

Mini-Split Bib Kits

Table of Contents

Setup Instructions	2
Maintenance and Storage	3
Limited Warranty	4

Mini-Split Bib Kits


Setup Instructions



1
Slide bracket between wall and corner on each side of unit.



2
Hook the support rib into each bracket.

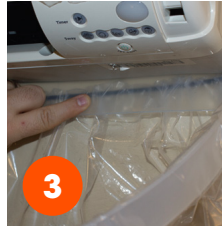

3
Slide deflector plate between wall and bottom of unit. Tuck plastic bib behind deflector plate.



4
Cover exposed components with included adhesive wrap.



5
Tighten bib kit by pulling on adjustable cord. Place end of bib hose in 5 gallon bucket and start cleaning!

CAUTION

1. Disconnect power from unit.
2. Make sure the assembly is secure and the adjustable cord is tight. There should be no slack in the adjustable cord.
3. While cleaning keep an eye on the water level in the 5 gallon bucket so that it does not get too high and overflow.
4. Make sure the water is draining into the 5 gallon bucket properly; any kinks in the bib hose should be addressed.
5. Dry and store Mini-Split Bib in bucket.
6. Use drop cloth under the cleaning area.

Prior to cleaning mini-split systems, please read all manufacturer's directions for maintenance and apply any cleaners per their specifically supplied directions.



For best results, use with these products:

The CoilJet® Coil Cleaner and CoilJet 0° flexible wand are ideal for use with the Mini-Split Bib Kit. Wand is available in 12" (8945-0-DEG-FW12) and 24" (8945-0-DEG-FLEX).

Mini-Split Bib® Kit Includes:

1. Bracket (Part# MSB-03)
2. Plastic "Bib" (Part# MSB-01)
3. Adjustable Cord (Part# MSB-06)
4. Support Rib (Part# MSB-02)
5. Deflector Plates
 - a. Short Deflector Plate (Part# MSB-05-01)
 - b. Long Deflector Plate (Part# MSB-05-02)
6. Adhesive Wrap (Part# MSB-07-01)
7. 5 Gallon Bucket (Part# BV-5-Bucket-70M)



Application Range: Up to 36" wide

Mini-Split Bib® Kit XL Includes:

1. Bracket (Part# MSB-03)
2. Plastic "Bib" (Part # BXL-001)
3. Adjustable Cord (Part# MSB-06)
4. Support Rib (Part # BXL-002)
5. Deflector Plates
 - a. Short Deflector Plate (Part# MSB-05-01)
 - b. Long Deflector Plate (Part# MSB-05-02)
6. Adhesive Wrap (Part# MSB-07-01)
7. 5 Gallon Bucket (Part# BV-5-Bucket-70M)



Application Range: 36" to 60" wide

Mini-Split Bib Kits

Limited Warranty

SpeedClean warrants that this item is free from defects in material and workmanship. SpeedClean, under this warranty, will repair or replace any parts that prove, upon examination, to be defective. This warranty is valid for 30 days from date of purchase by original purchaser. This warranty excludes unusual wear, abuse, unreasonable use, or damage resulting from an accident.

For warranty information DO NOT contact the place of purchase. To obtain warranty service, a proof of purchase is required. Contact SpeedClean Customer Service at (888) 700-3540.



PO Box 110301
Stamford, CT 06911-0301
(888) 700-3540
www.speedclean.com



SpeedyFoam®



CoilJet®



CoilShot®